

Thank you for choosing Rosetta hardscape products. The following are some helpful tips to make your first installation go smoothly. For more in-depth technical information, see our Rosetta Technical Guide (available at rosettahardscapes.com) or contact Rosetta Tech Support.

Your safety is important to us. Please follow OSHA guidelines, and utilize safety-toe boots, hardhats, gloves and eye, ear & respiratory protection whenever appropriate.

REQUIRED TOOLS

- LEVEL
- TAPE MEASURE
- LANDSCAPE ADHESIVE

PATIO TOP INSTALLATION

- Fire pits should never be installed atop a patio surface. Rather, the fire pit should be “cut in” to the patio surface to avoid damage to the patio.

SETTING THE PROPER CIRCUMFERENCE

- Place the steel liner, lip-side down, at the point of installation. Build the base layer around this liner to approximate proper circumference. Adjust the circumference as necessary. Remember to flip the steel liner, lip-side up, after completing the first row of block.

PATTERN

- Follow the attached block layout pattern to build the fire pit.

SECURING THE COPING

- Adhere the coping to the top row of block with landscape adhesive.


VENTILATION CLEARANCE

- On the finished fire pit, the steel liner should rest approximately $\frac{1}{4}$ " below the coping. This will allow for proper heat dispersal, extending the life of your fire pit.


BELVEDERE FIRE PIT KIT

QUICK INSTALL TIPS


BLOCK LAYOUT PATTERN

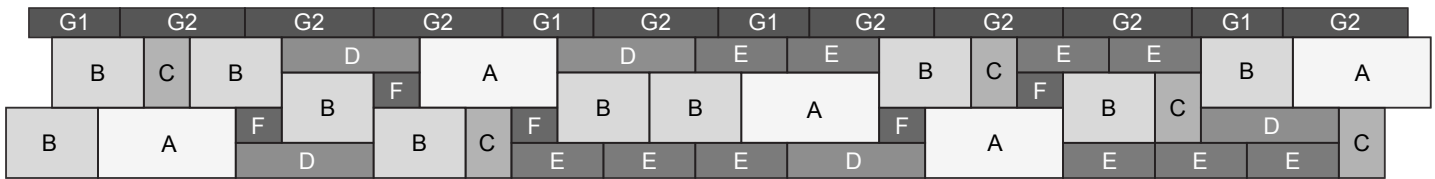

BLOCK KEY (Nominal Dimensions)



TOP VIEW

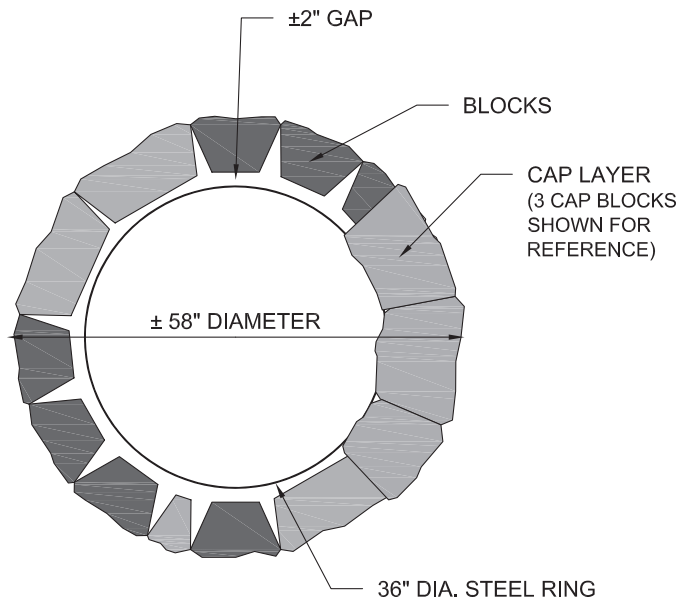

CROSS SECTION

