



ROSETTA

Visit one of our showrooms or learn more at midlandconcreteproducts.com

Clear Lake · 641.357.2176 | Marshalltown · 800.542.0015 | Waterloo · 800.747.8421 | Hiawatha · 319.393.3531

INSTALLATION NOTES

PATIO TOP INSTALLATION

- Fire pits should never be installed atop a patio surface as high heat can adversely affect the integrity of the product it's sitting upon. Rather, the firepit should be installed over a drainage stone base approx. 6". Fill the excavated area with drain stone, level, and compact for a level surface.

SETTING THE PROPER CIRCUMFERENCE

- Place the steel liner, lip-side down, at the point of installation. Build the base layer around this liner to approximate proper circumference. Adjust the blocks in or out as necessary to make for a tight fit. Remember to flip the steel liner, lip-side up, after completing the first row of block.

PATTERN

- Follow the attached block layout pattern to build the fire pit.

VENTILATION CLEARANCE

- On the finished firepit, the steel liner should rest below the coping units. This will allow for proper heat dispersal, extending the life of your fire pit.



SECURING THE COPING

- Adhere the coping to the top row of block with landscape adhesive.

BLOCK LAYOUT PATTERN



TOP VIEW

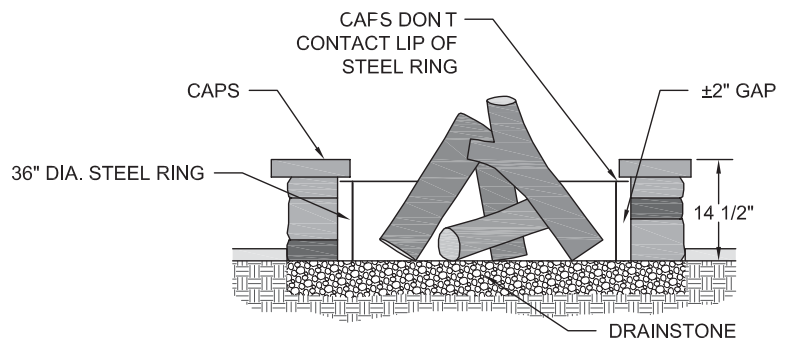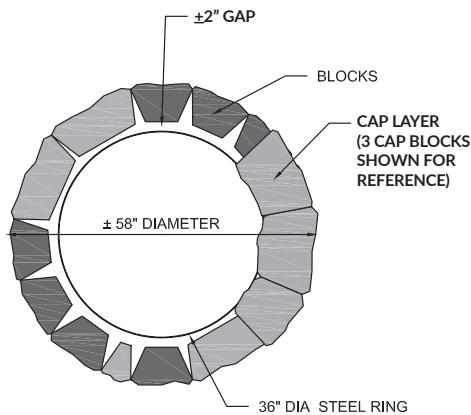

COLORS

FOND DU LAC



SLATE GRAY



Visit one of our showrooms or learn more at midlandconcreteproducts.com